



salton®

stainless steel
cordless
percolator



Instruction Booklet

Model: CU1777

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
6. If the percolator is overfilled, boiling water may be ejected.
7. **WARNING:** Scalding may occur if the Lid is removed during the boiling cycle
8. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
9. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
10. The use of accessories or attachments not recommended by Salton may cause hazards.
11. **DO NOT** use outdoors.
12. **DO NOT** let cord hang over edge of table or counter, or touch hot surfaces.
13. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
14. Extreme caution must be used when moving an appliance containing hot liquids.
15. This appliance is for Household Use Only. Do not use appliance for other than its intended use.
16. **DO NOT** leave unit unattended while in use.
17. **DO NOT** use appliance for other than intended use.
18. **DO NOT** open lid while coffee is perking.

19. **DO NOT** remove percolator from Base until it has finished percolating and the Indicator Light has changed to green.
20. Direct kettle spout away from cabinets, walls, etc. to prevent possible steam damage
21. Ensure that the Percolator is seated properly on the Base before connecting to the power supply
22. Unplug Base from electrical outlet and remove percolator from Base before filling.
23. Do not use Percolator if liquid is below the 4 cup marking.

SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

GROUNDING PLUG

To reduce the risk of electric shock this appliance has a grounded plug (2 blades and 1 pin). If the plug does not fit fully into the electrical outlet contact a qualified electrician. Do not modify the plug in any way or use an adaptor.

DESCRIPTION OF PARTS

1. Lid
2. Percolator Body
3. Base
4. Brew Basket Cover
5. Brew Basket
6. Spring (Not illustrated)
7. Percolator Tube
8. Power Indicator Light
9. Ready Indicator Light
10. On/Off Switch

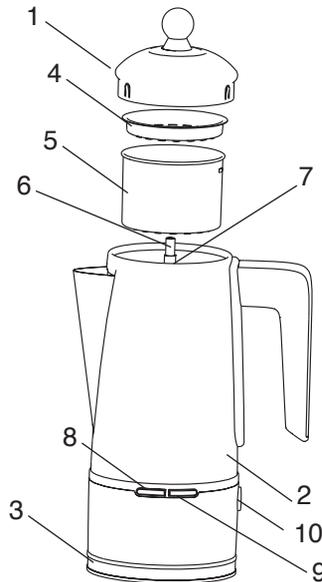

BEFORE FIRST USE

1. Read all instructions carefully and keep them for future reference.
2. Remove all packaging.

3. Before making coffee for the first time, wash the Brew Basket, Brew Basket Cover, Percolator Tube and Lid in warm soapy water. Rinse and dry.
4. Fill the Percolator with 500ml (2 cups) of cold tap water and bring to a boil. Add 500 ml (2 cups) of white vinegar and let stand for at least 1 hour or overnight. Discard.
5. Fill the Percolator to the maximum fill line with cold tap water. Bring to a boil and discard. Repeat.
6. The Percolator is ready to use.

HOW TO USE

1. Remove the Percolator from the Base.
2. Remove the Lid, Brew Basket, Brew Basket Cover and Percolator Tube.
3. Fill the Body with the required amount of fresh cold water. The cup markings are on the inside of the Body. **NOTE:** Do not use the Percolator if the liquid is less than 4 cup marking or more than the 10 cup marking.
4. Put the required amount of ground coffee (a perk or coarse grind is recommended) in the Brew Basket. **NOTE:** Use one level tablespoon per cup. You may want to experiment to find the quantities necessary to suit the blend you use and your own taste.
5. Lower the Brew Basket onto the Percolator Tube until the bottom of the Basket rests on the spring.
6. Hold the Percolator Tube/Brew Basket by the top of the Percolator Tube and lower the assembly into the Percolator Body so that the Percolator Tube fits in the element well in the center of the Percolator Body.
7. Place the Brew Basket Cover on top of the Brew Basket. Replace the Lid and push firmly to close. Rotate the Lid if it does not close properly. If still not closed make sure that the Brew Basket/Percolator Tube assembly is centered.

NEVER OPERATE THE PERCOLATOR WITHOUT THE LID IN THE POSITION.

8. Position the Base on a firm, level and heat-resistant surface and then plug into a 120V AC wall outlet
NOTE:
 - Never plug Percolator into an electrical outlet when reservoir is empty.
 - Direct Percolator spout away from cabinets, walls, etc. to prevent possible steam damage.
9. Press the On/Off Button. The Red Power Indicator Light will illuminate and the coffee will begin to brew.
10. Once the brewing cycle is complete the Green Ready Indicator Light

will illuminate and the coffee is ready to serve.

11. Serve and return the Percolator to the Base. The Green Ready Indicator Light will remain on and keep the coffee hot, as long as the Base is plugged into the outlet. If the temperature of your coffee goes below 72°C/161°F the unit will begin to re-boil.

CARE AND CLEANING

1. Unplug the Base from the outlet.
2. Pour out any unused coffee and allow the Percolator to cool.
3. Remove the Lid, Brew Basket, Brew Basket Cover and Percolator Tube.
4. Dispose of the used coffee grounds.
5. Wash the Lid, Brew Basket, Brew Basket Cover and Percolator Tube in hot soapy water, rinse and dry.
6. Rinse the inside of the Percolator with warm water and wipe the outside with a damp cloth.

NOTE: NEVER IMMERSER THE PERCOLATOR BODY OR BASE IN WATER OR ANY OTHER LIQUID.

7. **DO NOT USE ABRASIVE CLEANSERS OR SOLVENTS**
8. If necessary, once the Base has been unplugged from the outlet, wipe with a damp cloth.

2. Descaling

Under normal use, scale build-up will form on the inside of the percolator and will coat the stainless steel plate and element. Scale build-up may cause the element to overheat. It may also cause the unit to shut-off prematurely, resulting in colder coffee. Follow either of the 2 methods below:

A) Boil equal parts of white vinegar and water (500ml/ 2 cups of each is recommended). Once the water has boiled, allow the mixture to stand overnight. Empty out mixture and fill Percolator to the MAX level with fresh water. Bring water to a boil and discard.

B) For heavy scale build-up, use a scale/lime remover and follow its manufacturer's instructions.

IMPORTANT:

- The descaling process should be repeated periodically.
- Empty the Percolator after each use.
- Do not allow water to stand in the Percolator overnight.
- Scale build-up can be minimized by using filtered water instead of ordinary water.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

LIMITED WARRANTY

The original sales receipt is the only acceptable proof of purchase

Salton Canada warrants that this appliance shall be free from defects in material and workmanship for a period of two (2) years from the date of original purchase. Salton Canada, at its sole discretion during this warranty period, will repair or replace a defective product or issue a refund. Any refund to the purchaser will be at a pro-rated value based on the remaining period of the warranty. All liability is limited to the amount of the purchase price. This warranty covers normal domestic usage and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, abuse, glass breakage, neglect, improper maintenance, use contrary to the operating instructions or commercial use. This warranty is not available to retailers or other commercial purchasers or owners.

This warranty does not include the cost of shipping, which is to be borne by the customer.

TO OBTAIN PROMPT WARRANTY SERVICE:

Contact one of our many Service Centers found on our website
www.salton.com/customer-care

or

Securely package and return the appliance to us. Please enclose:

- Original proof of purchase
- The completed form below with a \$12.50 Return Shipping & Handling fee – either a cheque, money order or credit card (A personal cheque will delay return shipping by 2-3 weeks)

For added protection, we suggest that you use an insured delivery service with tracking information when returning your product. Salton Canada will not be held responsible for in-transit damage or for packages that are not received.

This warranty does not include the cost of shipping, which is to be borne by the customer.

.....

Name _____

Address _____

City _____ Prov/State _____ Postal/Zip Code _____

Daytime Phone No. _____ Email _____

Product defect: _____

Type of payment Cheque/Money Order Visa MasterCard

Name on card _____ Expiry Date _____ CSV No _____

Card No. _____

To contact our Customer Service Department:

SALTON CANADA
81A Brunswick,
Dollard-des-Ormeaux, Quebec H9B 2J5
Canada

Telephone: 514-685-3660 (Ext. 226)
E-mail: service@salton.com
Fax: 514-685-8300
www.salton.com